



NEW ZEALAND | 0800 10 10 28 sales@parkwooddoors.co.nz parkwooddoors.co.nz

AUSTRALIA I 1800 681 586 sales@parkwooddoors.com.au parkwooddoors.com.au

NOTES


OPENING WIDTH MUST BE 2 X DOOR WIDTH LESS 120MM OR LESS SET RAIL STOPS TO PREVENT ROLLERS CONTACTING IN CENTER

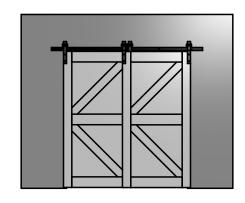

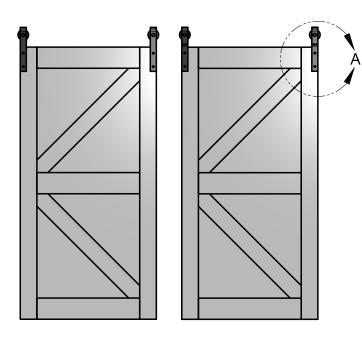

1. ATTACH HANGERS

DRILL HOLES FOR HANGERS, POSITIONING ON EDGE OF DOOR REPEAT FOR BYPASS DOOR

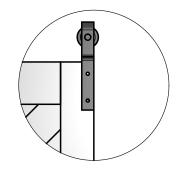

2. INSTALL TRACK

INSTALL TRACK USING OUR BARN DOOR 'TRACK INSTALLATION' GUIDE

THIS CAN BE FOUND ON OUR WEBSITE www.parkwooddoors.com.au

3. HANG DOORS

ENSURE THAT TRACK ROLLERS OVERLAP.

