



NEW ZEALAND I 0800 10 10 28 sales@parkwooddoors.co.nz parkwooddoors.co.nz


AUSTRALIA I 1800 681 586 sales@parkwooddoors.com.au parkwooddoors.com.au


YOU WILL NEED:


- Plantation Barn Door Kit
- Hammer
- 15mm Nails
- Tape Measure
- Wood Glue

















1. CHOOSE YOUR STYLE










CHECK FOR SQUARE: MEASURE ACROSS DIAGONALS IF MEASUREMENT IS SAME THEN PROCEED

2. LAYOUT PARTS



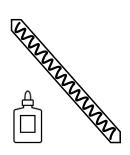









4. NAIL IN PLACE

Product Description:
BARN DOOR ASSEMBLY

Product Code: Date: 05/21/2023

Material: Units: