


BLACK METAL BARN DOOR Installation guide


Black Metal Barn doors can be purchased as a kit set or on their own.

If you have purchased the door on its own, a track will be required to be purchased separately. If you have purchased as a kit set then you should have everything you require to install.

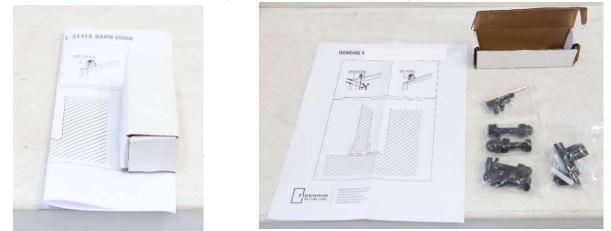

However you have purchased the door, it comes with an instruction sheet, floor mounted guide and a small box containing shorter bolts for a face mounted roller (door is only 30mm thick).

Remove the plastic caps from the door stile and fit rollers to the door, making sure the roller wheel is facing towards the wall and placed directly above the door. Please refer to photos overleaf.

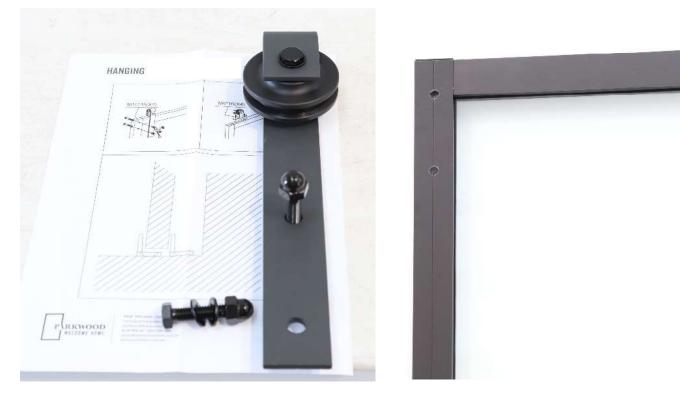



Front

Back

The track is then installed following the instructions that come with it. Fit the door guide to the floor, making sure the gap between the door and the wall is even top to bottom.



If you purchased as a kit, a handle (HAF16230BLK) is included for the front of the door. This does not include a backing plate.





NEW ZEALAND | 0800 10 10 28 sales@parkwooddoors.co.nz parkwooddoors.co.nz AUSTRALIA | 1800 681 586 sales@parkwooddoors.com.au parkwooddoors.com.au